


IRR-SPV4 Replacement Pump

Before using the pump for the 1st time (or after not being used for several days), it needs to be primed by squirting water through the inlet (**marked I**) using the syringe provided in the main kit with a short piece of tube attached.

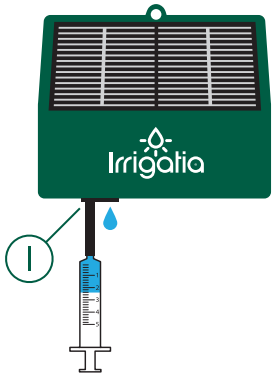

If you are replacing an SPV2 pump you may need to turn the controller down to get a similar application of water.

The pump head can be dismantled for cleaning or for replacing a valve if it has been damaged for any reason.

For more information go to: **irrigatia.com/spv4**

